




STEP 1: STRIP WIRES 1/2" FROM ENDS.

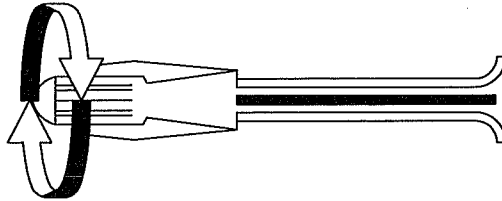

STEP 2: APPLY SCOTCHLOK Y SPRING CONNECTOR IN A CLOCKWISE DIRECTION.

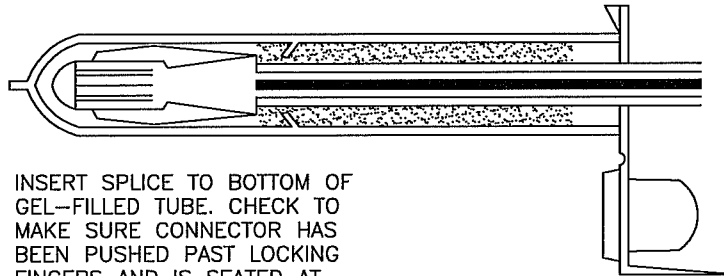

STEP 3: INSERT SPLICE TO BOTTOM OF GEL-FILLED TUBE. CHECK TO MAKE SURE CONNECTOR HAS BEEN PUSHED PAST LOCKING FINGERS AND IS SEATED AT BOTTOM OF TUBE.

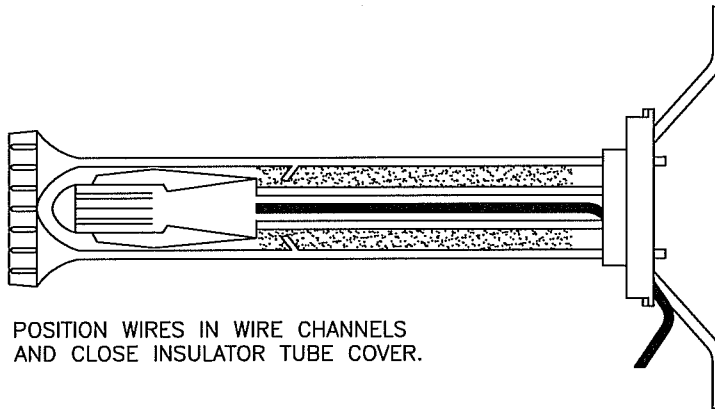

STEP 4: POSITION WIRES IN WIRE CHANNELS AND CLOSE INSULATOR TUBE COVER.

NOTE: MAXIMUM WIRE SIZES PER CONNECTOR ARE 3 - #14'S OR 2 - #12'S.



CITY OF CLOVIS

DWG NO.

P-11

3M DBY WIRE CONNECTOR

REF: STD. SPECS SECTION 21, LANDSCAPE IRRIGATION SYSTEMS

APPROVED BY:	NO.	REVISED	BY	APPROVALS			SCALE: NTS
CITY ENGINEER	_____	01-27-11	BGJ	CM	OTHER	_____	DRAWN BY: JA
	_____	_____	_____	DRU	OTHER	_____	SHEET 1 OF 1
DATE:	_____	_____	_____	PUD	OTHER	_____	

[Handwritten signature]
1/19/11