
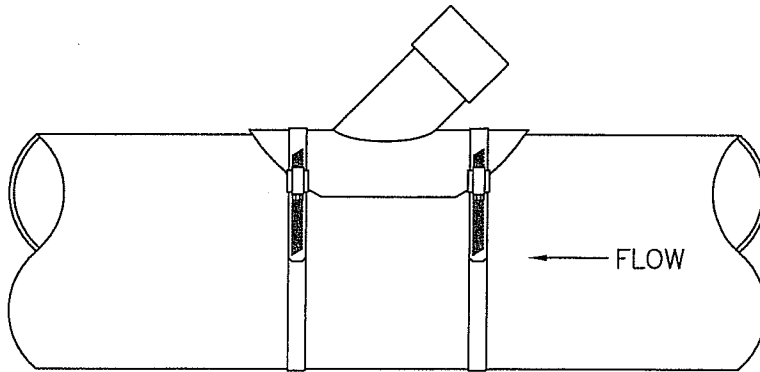
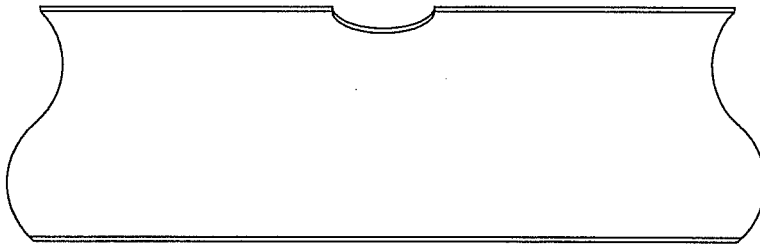


NOTE:

USE WYE GASKET TO TRACE SIZE AND SHAPE OF OPENING ONTO PIPE. REMOVE ALL BURRS FROM OPENING.

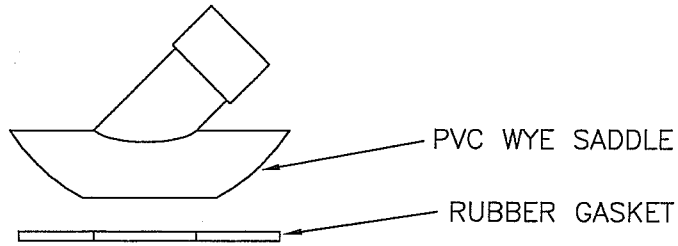

ATTACH WYE SADDLE WITH 2 STAINLESS STEEL BANDS PER MANUFACTURERS SPECIFICATIONS.







CITY OF CLOVIS

DWG NO.
S-1A

TAPPING SADDLE ASSEMBLY

REF. STD. SPECIFICATIONS
SECTION 64

APPROVED BY:	NO.	REVISED	BY	APPROVALS	SCALE: NTS
CITY ENGINEER 		03-13-09	BGJ	CM  DRU  PUD 	DRAWN BY: BGJ
	DATE: 6/29/09				SHEET 1 OF 1